A	B	C	D
A-HU 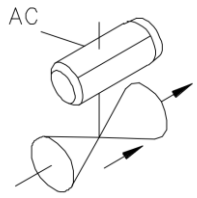	B-HU 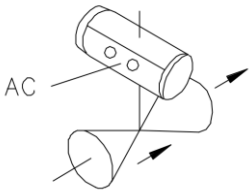	C-HU 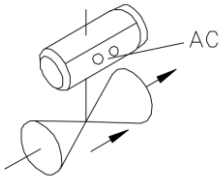	D-HU 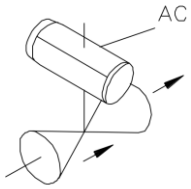
A-VU 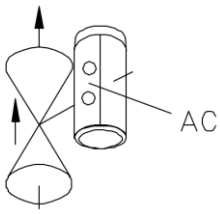	B-HR 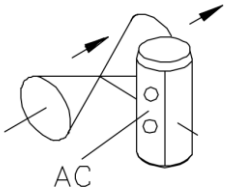	C-VD 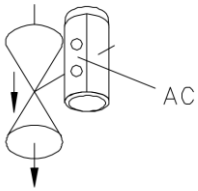	D-HL 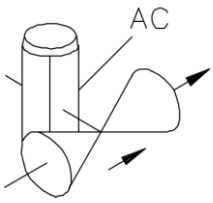

A = Actuator parallel to pipe line. Air connections on left side from position indicator
B = Actuator crosswise to pipeline. Air connections on upstream side
C = Actuator parallel to pipe line. Air connections on right side from position indicator
D = Actuator crosswise to pipe line. Air connections on downstream side

H = Horizontal pipe
V = Vertical pipe
D = Flow downwards
U = Flow upwards

R = Stem to right
L = Stem to left

Note
If valve is bidirectional only A & B column is valid.

A = Stellantrieb in Flussrichtung. Luftanschlüsse auf der linken Seite vom Stellungsanzeiger
B = Stellantrieb quer zur Flussrichtung. Luftanschlüsse auf der Anströmseite
C = Stellantrieb in Flussrichtung. Luftanschlüsse auf der rechten Seite vom Stellungsanzeiger
D = Stellantrieb quer zur Flussrichtung. Luftanschlüsse auf der Abströmseite

H = Horizontale Rohrleitung
V = Vertikale Rohrleitung
D = Durchfluss nach unten
U = Durchfluss nach oben

R = Spindel nach rechts
L = Spindel nach links

Anmerkung
Hat die Armatur keine bestimmte Durchflussrichtung, ist nur die Spalte A und B gültig.